INSIGNIA™

42" 1080p LED HDTV

QUICK SETUP GUIDE

NS-42E470A13

Thank You

for purchasing this fine Insignia television.
We hope you enjoy the quality and reliability of this product for years to come.

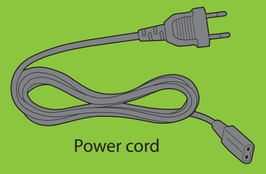
Power cord

Remote control and 2 AAA batteries


Stand cover

M4 (12 mm) screws (4)

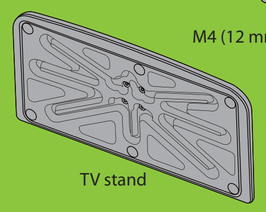
TV stand

WE ARE GOING GREEN!

A copy of your *User Guide* is not provided in the box but is available online. Go to www.insigniaproducts.com, click **Support & Service**, enter your model number in the **Product Search** field, then click **Search**.

Front features

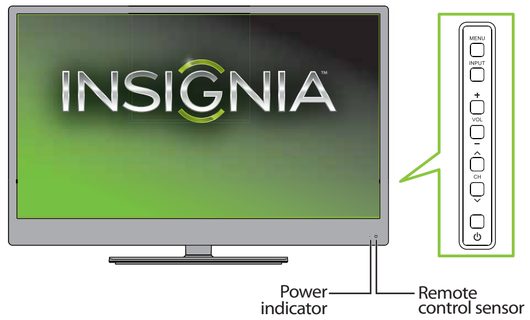

Installing the stand

1 Carefully place your TV screen face-down on a cushioned, clean surface to protect the screen from damages and scratches.
2 Secure the TV stand to the stand column with the four provided screws.

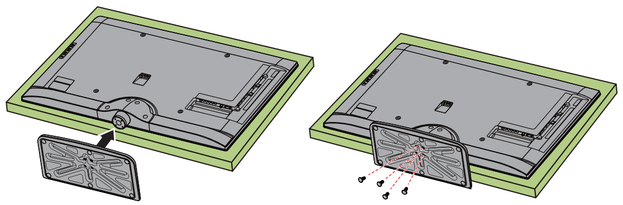

Installing a wall-mount bracket

1 Carefully place your TV screen face-down on a cushioned, clean surface to protect the screen from damages and scratches.
2 Remove the four screws that secure the stand column, then remove the stand column.
3 Secure the stand cover to the back of your TV using the four screws you just removed.
4 Attach the wall-mount bracket to your TV using the mounting holes on the back of your TV. See the instructions that came with the wall-mount bracket for information about how to correctly hang your TV.

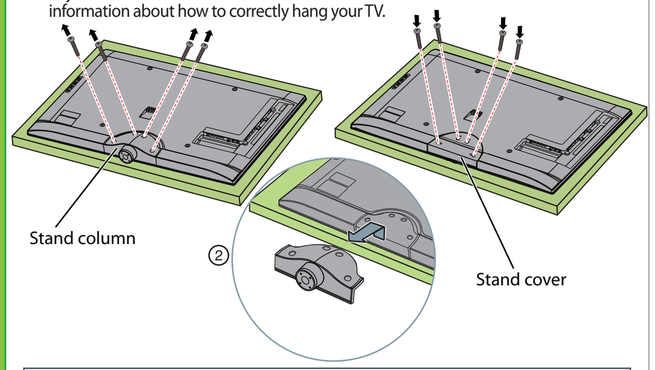

Warning

This apparatus is intended to be supported by a UL Listed wall mount bracket.

Identifying cables

Your TV has several connection types for connecting devices. For the best video quality, connect a device to the best available connection.

Connection type	Video quality	Cable connector
HDMI video/audio	Best	
OR		
Component video and analog audio	Better	
OR		
Composite video and analog audio	Good	

You can use the HDMI 1/DVI jack to connect a DVI device to your TV. You need to attach an HDMI-to-DVI adapter to the end of the HDMI cable that connects to the DVI device's jack.

Connecting a DVD or Blu-ray player, cable box, satellite receiver, camcorder, or game station

Using an HDMI cable (best)

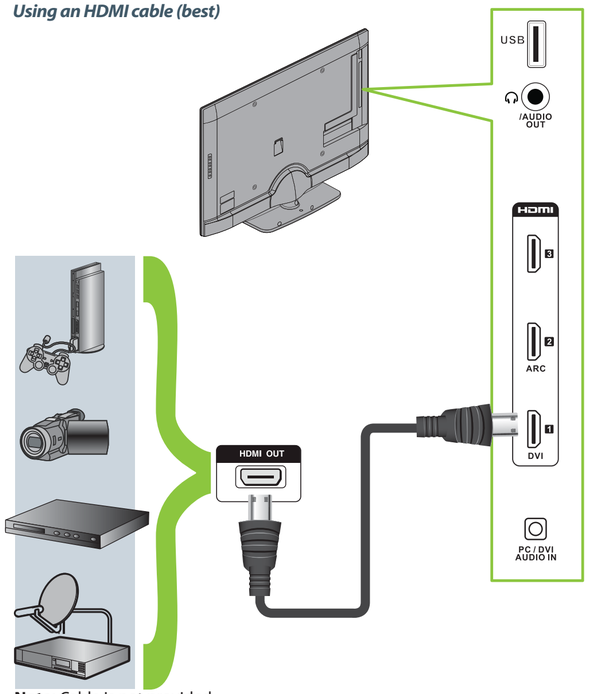

Note: Cable is not provided.

Using component cables (better)

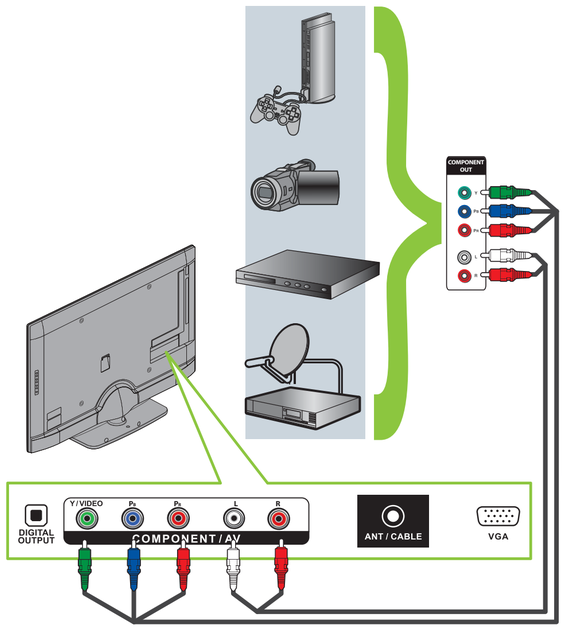

Note: Cables are not provided.

Using a composite cable (good)

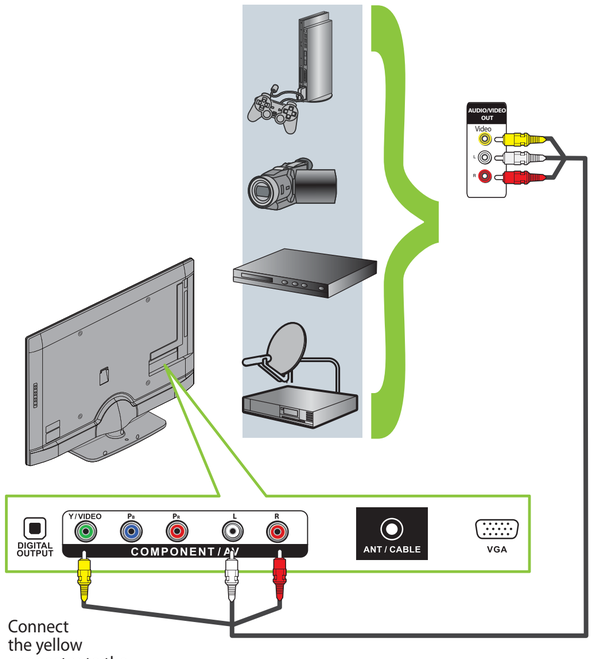

Connect the yellow connector to the green **Y/VIDEO** jack.

Note: Cable is not provided.

Connecting to an antenna/cable wall jack

Connect a coaxial cable (not included) to the **ANT/CABLE IN** jack on the back of your TV and to the Antenna/Cable wall jack.

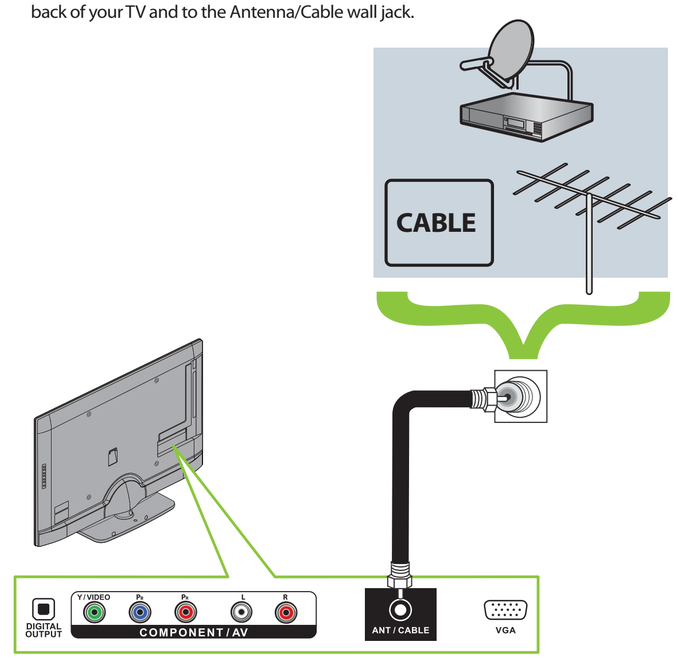

Note: Cable is not provided.

Connecting a Home Theater System

Using digital audio

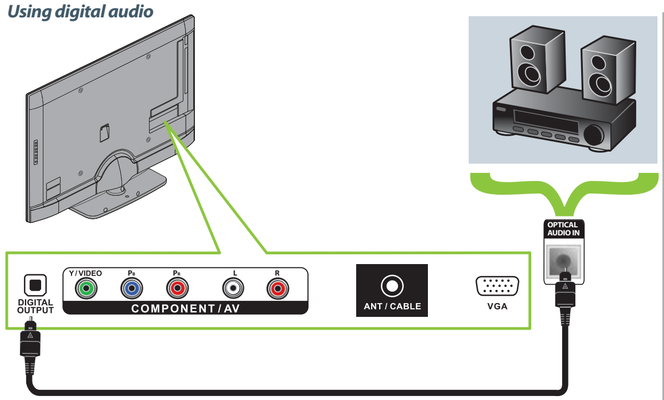

Note: Cable is not provided.

Using analog audio

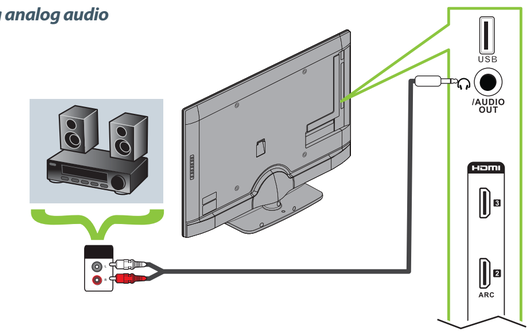

Connecting a home theater system with multiple devices

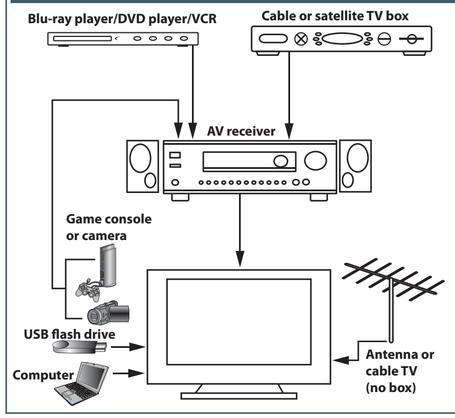

We recommend that you connect the AV receiver's **HDMI OUT** jack to your TV's **HDMI 2 (ARC)** jack.

In the following situations, the HDMI cable routes Dolby Digital audio to the AV receiver, so you do not need to connect a separate digital audio cable:

- When you have a game console connected to one of your TV's **HDMI** jacks.
- When you watch a program through an antenna or cable TV connected to the **ANT/CABLE** jack.

Connecting power

Plug the AC power cord into the **AC IN** jack on the back of your TV, then plug the other end of the cord into a power outlet.

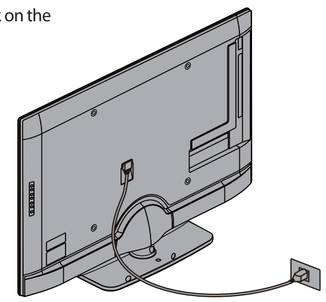

Setting up and using your remote control

1. Press the release button on the back of the remote control to remove the battery compartment cover.
2. Insert two AAA batteries into the battery compartment. Make sure that the + and – symbols on the batteries match the + and – symbols in the battery compartment.
3. Replace the cover.



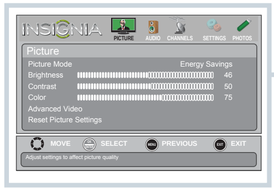

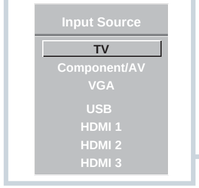

Power
Turns your TV on or off.

Numbers
Enter channel numbers.

•
Enters a digital sub-channel number (e.g. 4.1).

ENTER
Confirms selections or changes.

MENU
Opens the on-screen menu.

EXIT
Closes the on-screen menu.

INPUT
Opens the *Input Source* list.

CH-LIST
Opens the channel list.

Volume
Changes the volume.

SLEEP
Sets the sleep timer.

ZOOM
Changes how the picture displays on the screen.

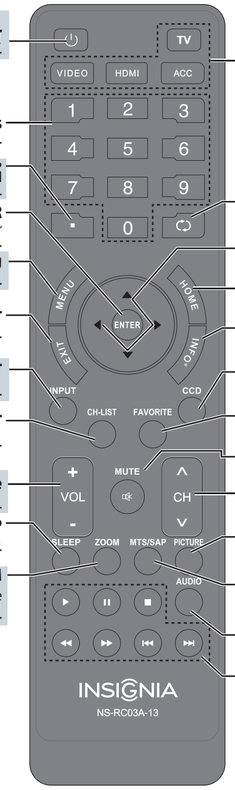

Quick Launch Inputs
Selects another video source connected to your TV.

RECALL
Returns to the previous channel.

Arrows
Navigate in on-screen menus.

HOME
Opens the on-screen menu.

INFO*
Opens a TV status banner.

CCD
Turns closed captioning on or off.

FAVORITE
Opens the Favorite Channel List.

MUTE
Mutes the sound.

Channel
Changes the TV channels.

PICTURE
Selects the video mode.

MTS/SAP
Cycles through mono, stereo, and secondary audio for analog programs.

AUDIO
Selects the audio mode.

INlink Controls
Controls HDMI-CEC devices connected to your TV.

Aspect ratio options

Normal:
Displays the original 4:3 aspect ratio with vertical black bars on the left and right hand side of the screen.

Zoom:
Expands the image to fill the screen. The top and bottom of the image may be cropped.

Wide:
Use this option to view content recorded in a 16:9 (wide-screen) aspect ratio.

Cinema:
Stretches the image at the edges, but keeps a clear image in the center.

Auto:
Automatically adjusts the image based on the screen size and the TV program. **Note: Auto** is only available when **Auto Zoom** in the *CHANNELS* menu is set to **On**.

Programming your remote control

To program a universal remote control to work with your new Insignia TV, see the table for common codes. If you have problems programming your remote or need a different remote control code, visit www.insigniaproducts.com/remotecodes for the latest remote control code information.

Universal remote TV codes

Universal remote controls				Cable/Satellite/Set-top boxes								
One for All	Philips	RCA	Sony	Cablevision	Charter	Comcast	Cox	Direct TV	Dish Network	Time Warner	Tivo	Verizon
0054	0198, 0490	135	068, 069, 078, 096, 100, 164, 168, 229, 026	068, 069, 078, 096, 100, 164, 168, 229, 026	2002, 1204, 1423, 1517, 0171, 1963, 0463, 1463, 0842, 1326, 167, 415, 424, 450, 456, 461, 507, 523, 567, 577, 586	10171, 11204, 11326, 11463, 11517, 11641, 11780, 11785, 11892, 11963, 12002	1326, 1463	10171, 11204, 11326, 11517, 11564, 11641, 11963, 12002	720	400, 450, 461, 456, 10463, 1463, 0463	0091	0198, 0490

Turning on your TV for the first time

1. Connect the power cord to your TV and to a power outlet, then press ⏻ (power). The power indicator turns off and the *Choose Your Menu Language* screen opens.
2. Press ▲ or ▼ to highlight a language, then press **ENTER**. The *Choose Your Time Setting* screen opens with **Mode** highlighted.
3. Press ◄ or ► to select **Auto** or **Custom**. If you select **Auto**, the date and time are set automatically from a digital TV signal. If you select **Custom**, you can manually set the date and time. Press **ENTER**. The *Choose Your Picture Mode* screen opens.
4. Press ▲ or ▼ to highlight **Home Mode** or **Retail Mode**, then press **ENTER**. If you select **Retail Mode**, a message asks you to confirm your selection. Select **Yes** or **No**. **Retail Mode** is not an energy-saving mode. The *Choose Your TV Source* screen opens.
5. Press ▲ or ▼ to highlight **Antenna**, **Cable**, or **Satellite box**. If you select **Antenna** or **Cable**, your TV scans for available channels. The scan may take several minutes. If you select **Satellite box**, a message will ask you to select a way to connect the statellite box to the TV.
6. To watch TV, press **TV** on the remote control.

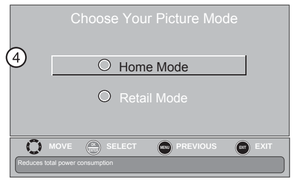

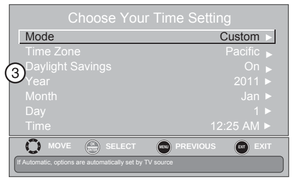

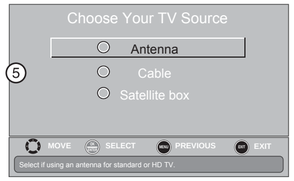

INSIGNIA™

One-year limited warranty

Visit www.insigniaproducts.com for details.

Need additional help?

See your ***Online User Guide***! This comprehensive guide includes everything from basic how-to steps to more advanced features. A copy of your *User Guide* is not provided in the box but is available online. Go to www.insigniaproducts.com, click **Support & Service**, enter your model number in the **Product Search** field, then click **Search**.

Check out our online **community forum** at www.insigniaproducts.com for helpful information from other Insignia TV owners.

We're here for you

www.insigniaproducts.com

For customer service, call:

877-467-4289 (U.S./Canada markets)

Distributed by Best Buy Purchasing, LLC
7601 Penn Avenue South, Richfield, MN USA 55423-3645

© 2012 BBY Solutions, Inc.
All rights reserved. INSIGNIA is a trademark of BBY Solutions, Inc. Registered in some countries. All other products and brand names are trademarks of their respective owners.

WE ARE GOING GREEN!

A copy of your *User Guide* is not provided in the box but is available online. Go to www.insigniaproducts.com, click **Support & Service**, enter your model number in the **Product Search** field, then click **Search**.